

# TOWING/MAINTENANCE NOTICE

This bus is equipped with Bendix Intellipark, an electronic parking brake system.

To release the parking brake for towing or maintenance:

1. Chock wheels to prevent vehicle movement
2. Ignition key ON
3. Following the air system self check procedure...
4. Place your foot on the floor ( *Do not touch the brake pedal* )
5. Press the Intellipark switch in this pattern:
  1. *Press down, let go*
  2. *Press down, let go*
  3. *Press down, let go*
  4. *Press down, let go*
  5. *Press and hold until the red indicator flashes*
6. Place your foot on the brake pedal
7. Release the parking brake
8. Leave the ignition key in the ON position
9. **The parking brake is now released. Use Caution!**



*Service mode must only be used by mechanics. No bus engaged in the transportation of students should operate using Intellipark service mode as a routine method of operation. You must fully understand how to engage and disengage service mode prior to placing a bus into or out of operating service.*