

Transmission

Switching to Manual Mode



0000475742

When Vehicle is in Motion

1. Lift your foot off the accelerator pedal.
2. Push in on the knob on the end of the stalk shifter. The gauge cluster drive mode indicator will change from Drive (D) to Manual (M).
3. After the gauge cluster displays M, you are free to manually shift gears as needed, whether your foot is on the accelerator or not.

NOTE: If you leave your foot on the accelerator pedal when you press the stalk shifter knob, the gauge cluster will indicate M, but manual mode will not be engaged. Return to fully automatic mode by pressing in on the end of the stalk shifter. Then, start again at Step 1.

When Vehicle is at Rest

1. Place your foot on the brake pedal.
2. Push in on the knob on the end of the stalk shifter. The gauge cluster drive mode indicator will change from D to M.
3. After the gauge cluster displays M, you are free to take your foot off the brake pedal and apply the accelerator.

Switching Gears in Manual Mode



0000475743

Once in manual mode, push the stalk forward towards the instrument panel in order to downshift, and pull the stalk back towards the operator to upshift gears.