


Service Door Release Operation

Interior Operation

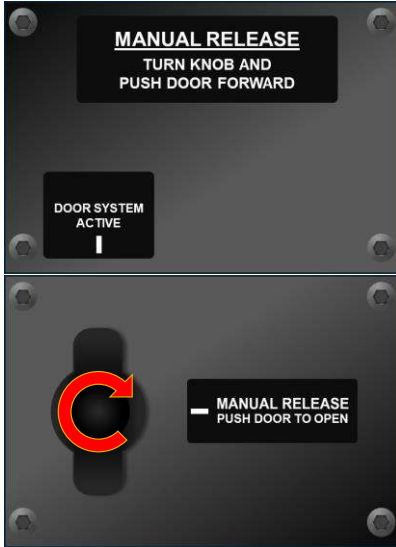

Door System Active – *Upright Knob*

- Service door operates normally with the switch in the driver's compartment.
- Must be in this mode for the door to latch from the outside.

Manual Release– *Rotate Knob Right*

- Entrance door can be manually operated.
- Service door will not operate with the switch in the driver's compartment.
- The door will not latch from the outside.

Exterior Operation



Electric Door Release

- Rotation of the knob to the right automatically opens and closes the service door.
- Interior knob must be in the “active” position for this switch to operate.

Air Door Release

- Rotation of the knob to the right releases the latches, allowing the door to be pulled open manually.
- Interior knob must be in the “active” position for this switch to operate.